


Concrete Installation

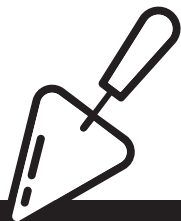

READ BEFORE YOU POUR

Concrete Wet-Pour – Expansion & Crack Control.
Concrete will push this frame out of shape. Follow these five steps so the lid always fits.

1. Set and brace the **HIDE** frame

Position and level the frame at finished height and fix it so it cannot move. Fit the Inlay Lid or tight timber spreaders in the opening before pouring and leave them in until the concrete has set.

2. Apply expansion foam

Wrap 10 mm closed-cell expansion foam around the full outside of the frame, flush with the top edge, and tape the ends.

3. Pour concrete

Pour and finish against the foam. Never pour concrete directly against the stainless steel frame. Do not screed off the top rim.

4. Finish the joint

Once cured, recess the top of the foam and finish with a flexible polyurethane exterior sealant.

5. Control cracking


Provide control joints and/or reinforcement as required by the slab design. As a minimum, saw-cut a joint from each corner of the frame to the nearest joint or edge within 48 hours.

BEFORE LEAVING SITE the Inlay Lid must drop in freely by hand.



H I D E[®]
Exterior Covers

Concrete Installation

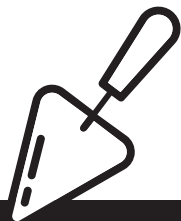

IMPORTANT

The HIDE frame is a rigid penetration. Concrete poured hard against it will compress the frame and the lid will no longer fit.

Appropriate isolation and crack control must be provided in the surrounding concrete. Frames damaged by slab movement are not covered by warranty.

FULL INSTRUCTIONS

Scan for finished height, bonding, filling the Inlay Lid, polishing near stainless, sealing the joint, and what to do if the lid does not fit.



<https://skimmerlids.com.au/installation-guide-concrete-wet-pour/>

SUPPLIED BY THE INSTALLER

10 mm closed-cell foam expansion strip (approx. 2 m per frame) · flexible polyurethane joint sealant and backer rod · non-staining masking tape.

STAINLESS CARE

Never use acid or chemical wash on HIDE stainless. Polish by hand only – no machines, no steel tools. Remove the lid and mask the frame before any grinding or polishing.

SAFETY KEYS

Pass both Safety Keys to the homeowner. Never leave them in the lid.



HIDE / Skimmer Lids

+61 7 3807 2551

admin@skimmerlids.com.au

skimmerlids.com.au